

Usage Tips

 
1. Note on Adjust color

1) Gamma

Adjusted value R, G, and B (-5 - +5)

Use this function to adjust the density of the middle tones.

When you want to increase the density of the middle tones, decrease the value of "Gamma".

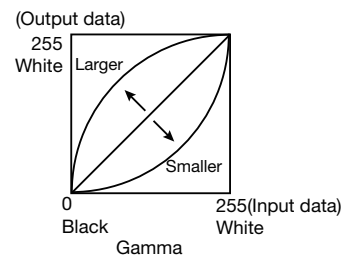


2) Brightness

Adjusted value R, G, and B (-64 - +64)

Use this function to adjust the brightness of the print picture.

 When you want to make the print picture darker, decrease the value of "Brightness".

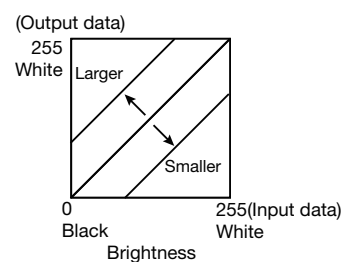


3) Contrast

Adjusted value R, G, and B (-64 - +64)

Use this function to adjust the contrast of the print picture.

 When you want to make the contrast of the print picture stronger, increase the value of "Contrast".

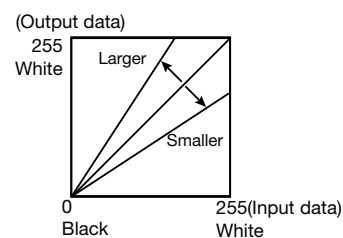

2. Binding edge setting for the size of the landscape image

If you choose the size of the landscape and square image, the direction you want to bind will be reversed.

Please set Long-Edge binding when you want to set Short-Edge binding.

Please set Short-Edge binding when you want to set Long-Edge binding.

(The size of the landscape image: 6 x 4", 6 x 6", 7 x 5", 8 x 4", 8 x 6", 8 x 8")

* Paper size type and binding edge setting and printer output

Paper size type	Binding edge setting	Side A	Side B
Landscape size	Short-Edge binding		
	Long-Edge binding		
Portrait size	Short-Edge binding		
	Long-Edge binding		

When you print the job of one page in multiple copies on Two-sided printing, landscape image size is always be on the short-edge binding and portlate image size is always be on the longedge binding independently of binding setting.